

re.

LUXURY FOOT MASSAGER



BRUKSANVISNING – BRUKSANVISNING – BRUGSANVISNING –

HIERONTATYYNYYN KÄYTTÖOHJE – USER MANUAL

LES ALLE INSTRUKSJONENE FØR BRUK. TA VARE PÅ DISSE INSTRUKSJONENE FOR FREMTIDIG BRUK
LÄS ALLA INSTRUKTIONER FÖR ANVÄNDNING. SPARA DESSA INSTRUKTIONER FÖR FRAMTIDA BRUK
LÆS HELE VEJLEDNINGEN FØR BRUG. OPBEVAR DENNE VEJLEDNING TIL FREMTIDIG BRUG
LUE OHJEET ENNEN KÄYTTÖÄ. SÄILYTÄ NÄMÄ OHJEET MYÖHEMPÄÄ TARVETTA VARTEN
READ ALL INSTRUCTIONS BEFORE USE. SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE



SAFETY INSTRUCTIONS

Use the machine according to the instructions in this manual

- Please check if the foot cover is installed properly before use.
- Remove footwear before use.
- Do not damage the power cord, break, bend or pull forcibly.
- Insert your feet into the foot compartment before activating to avoid damaging airbags due to overpressure.
- For safety purposes, product only allows one user at a time. Do not allow more than one user to put their leg into the foot compartment at the same time, it may cause serious injury
- Do not use the product if the detachable covers are damaged or in case of mechanical or electronic failure, send it for a maintenance check or repair at your dealer when necessary.
- Do not stand on the product
- Do not sleep while using the product.
- Do not place your hands or head in or above foot compartment.
- Do not place heavy object on the product.
- Do not put any items into the foot compartments (e.g. a pillow or towel).
- Do not use the product in combination with other types of electrical appliances for massaging or for physical therapy or treatment.
- Do not put medical or cosmetic creams or lotions on your lower legs and feet before or during use of the product.
- Do not use the product if cover is damaged or if there is a mechanical or electronic failure. You should contact dealers.
- Do not use this product in high temperate conditions or beside hot objects such as heaters, stoves.
- This is not a toy. Do not allow children below 12 years to use the product
- Place or keep the product on the flat floor surface.
- Recommended usage time for an individual is 15 minutes a day.


WORKING ENVIRONMENT

- Do not use the massager in a highly humid environment such as bathroom.
- Do not use the massager immediately after there has been a sharp change in the environment temperature.
- Do not use the massager in an environment with lots of dust or corrosive materials.

UNSUITABLE USERS

- People with a strained muscle or sprained joint in your feet or lower legs.
- People with weak or injured bones.
- People recovering from recent surgery.
- People having an open wound on the foot.
- People suffering from a foot or calf disease e.g. athlete's foot.
- People undergoing medical or paramedical treatment.
- Patients with osteoporosis
- People with contagious skin conditions.
- Patients with heart diseases and with implanted devices.
- Women that are pregnant
- This product is not intended for use by persons (including children under 12 years old) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless under supervision by person responsible for their safety.

PRODUCT DESCRIPTION

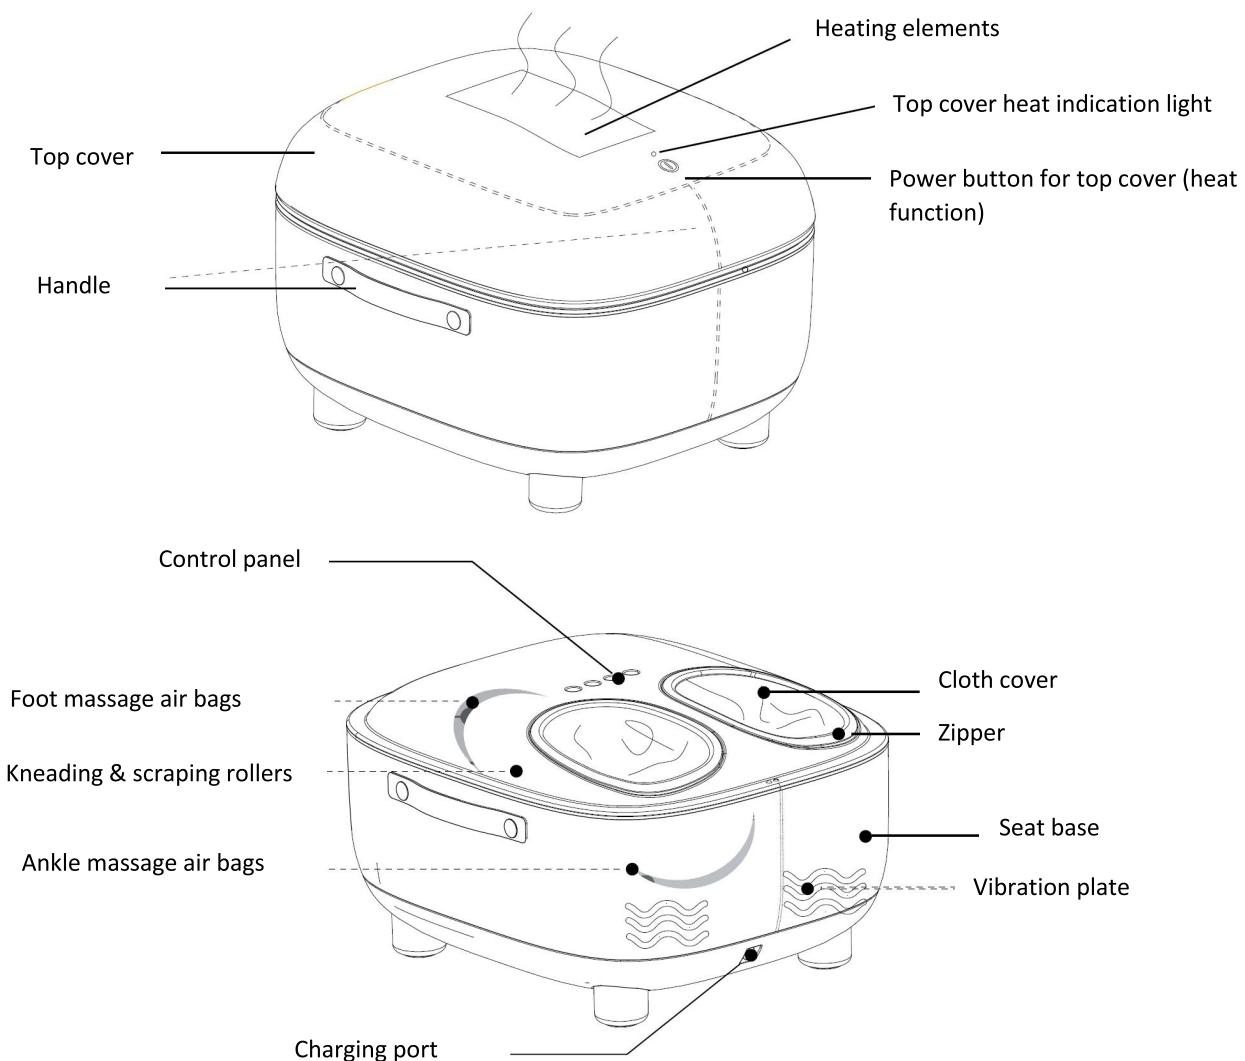

FUNCTIONAL DESCRIPTIONS

Control panel

	Descriptions
Power (top cover)	Press once to activate heat function on top cover; press again to deactivate.
	Descriptions
On / Off (massager)	Press once to activate the massage function; press again to deactivate.
	Descriptions
Mode	Press to select one of four automatic programs. Each program will indicate by a different color light: Mode 1 – Red, Mode 2 – Blue, Mode 3 – Green, Mode 4 – Purple.
	Descriptions
Heat	Press to activate heat function on the foot massager; press again to deactivate.
	Descriptions
Strength	Press to select one of the three strength levels, each level will be indicated by a different color light. Green-Low, Blue-Medium, Red-High

HOW TO OPERATE

Before use

1. Place the product on the flat surface, remove the top cover.
2. Connect power cord to the adaptor and then insert the power jack of the adaptor into the charging port on the product.
3. Push the mains plug into an electrical wall socket.

Foot Massager

1. Sit on a suitable chair in a comfortable positions.
2. Place both feet into foot-compartment.
3. Press the power button  the indication lights will turn-on.
4. Press the mode button  to select one of the four automatic programs.

Mode 	Mode	Light	Description
	1 – By default	Red	Air pressure massage+ Scraping+ Vibration (Pressure kneading and scraping massage are moderate)
	2	Blue	Air pressure massage + Scraping + Vibration (More pressure kneading, less scraping.)
	3	Green	Kneading + Scraping + Vibration only
	4	Purple	Air pressure massage only

5. To add heat into the massage, Press the heat button ; Press the button to stop the heat function.
6. You can select one of the three massage strength by pressing the strength button 

Strength 	Strength	Light
	Low - By default	Green
	Medium	Blue
	High	Red

Heat function on cover

1. To enjoy the heat function on the cover, put the cover back on the foot massager.
2. Make sure the power sign on the top cover face nearer to you so that the power connector on the cover as well as on the massager can stay intact.
3. Press  on the cover (indicator light turned on) for the heat function on the cover. The heat will build up gradually. Press again to turn off the heat function.

Operating time

The default operating time is 15 minutes. The massager and heat cover will stop when the operating time is up. Press the power button  again to starts a new cycle.

TROUBLESHOOTING

This page summarizes the most common problems you could encounter with the product. If you unable to solve the problem with the information below, contact your dealer immediately.

Problem	Possible cause	Suggestion
Product not working	Power Plug not inserted properly	Re-insert the power plug properly
	The product has just finished its 15 minutes auto timer session and has automatically turned off.	If you want another session, press the power button again
	The product mechanism may be overheated due to prolonged usage.	Let the product cools down for 10 minutes before using it again.
	An excessive load has been applied to the product	Reduce the load and start again
Slight sound during operation	Sound is the result of mechanical movement	This is normal and no action required

CARE & MAINTENANCE

Cleaning

1. Do not use steel wool, abrasive cleaning agents or corrosive liquids (such as gasoline or acetone) to clean the product.
2. Wipe with a soft and dry cloth to clean the product.
3. Do not use a damp cloth or detergent.
4. Foot compartment covers are detachable and can be washed using normal detergent.
5. Make sure the covers are fully dried before attach back to the foot compartment.

Storage

1. Switch off and unplug the plug from the power outlet
2. Store the product in a cool dry place away from sunlight.
3. Do not stack heavy load on the product

Model no.	13402
Power input	100-240v - 50/60Hz
Power Output	24V --- 2A
Power consumption	50W
Auto timer	15 mins
Seat carrying weight	100 kg

Importer:

F&H A/S
Gl. Skivevej 70
DK-8800 Viborg
DENMARK